


Established 1784
Bramah Compact

1000 & 2000 Series Locks

FITTING INSTRUCTIONS

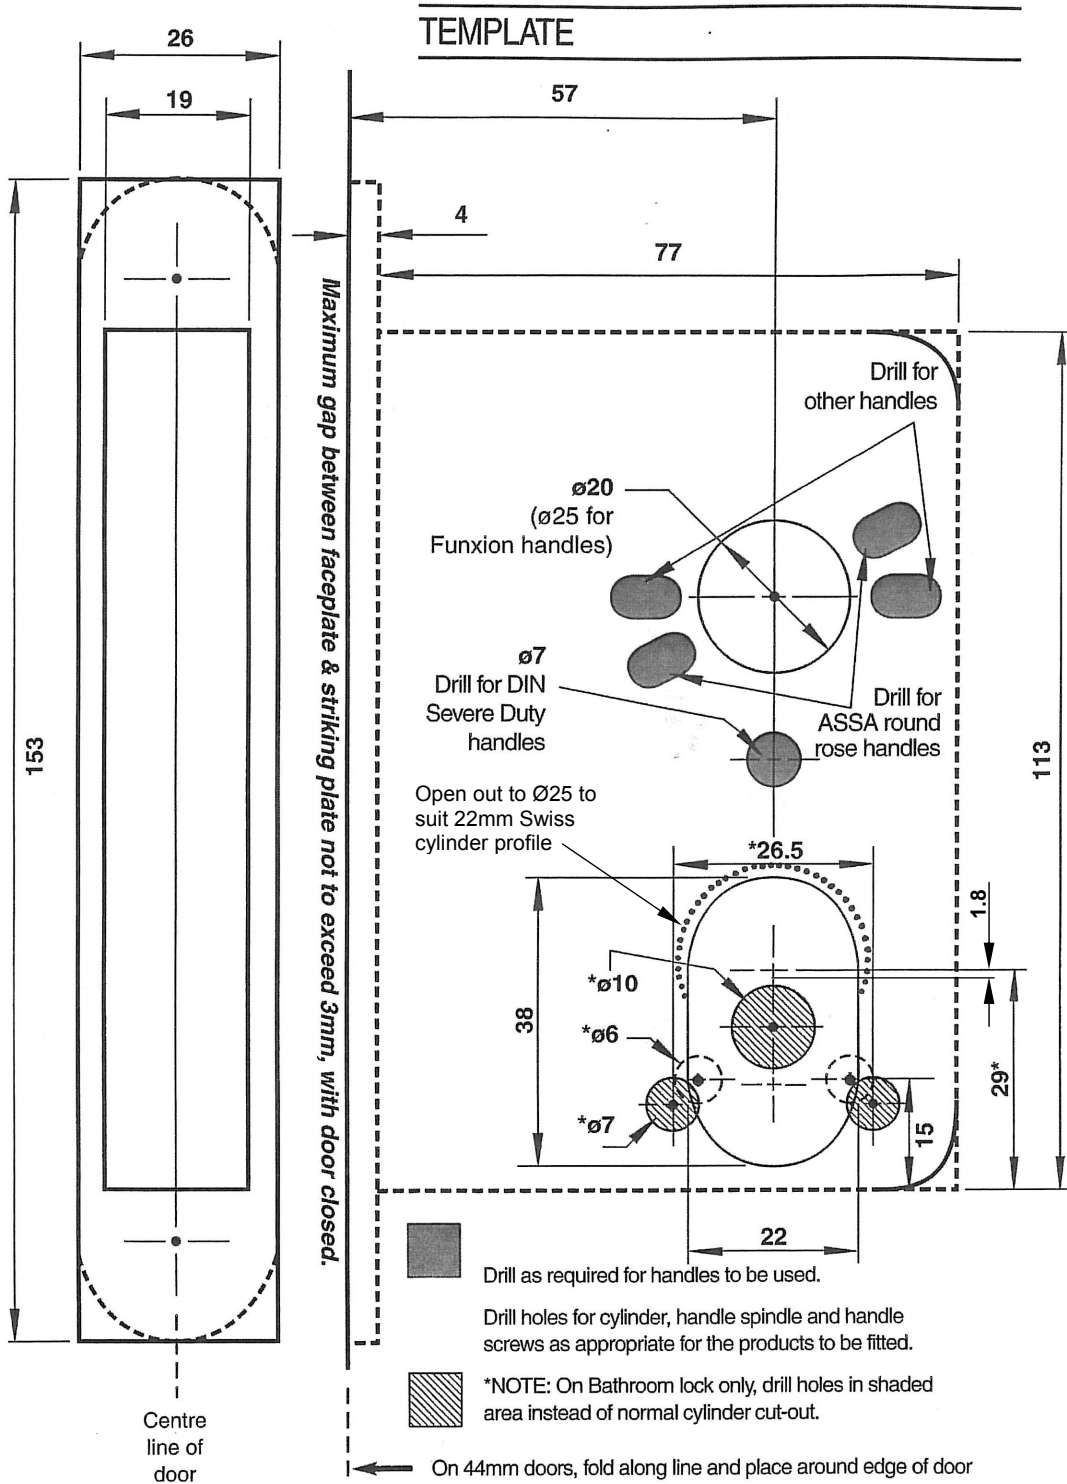

Bramah

31 Oldbury Place, Marylebone, London, W1U 5PT. Tel: 0870 027 2624

PK214 Iss:1

FITTING CYLINDERS

To fit a Euro Profile cylinder, simply remove the faceplate, place the cylinder in the cylinder hole, and insert the fixing screw through the forend into the cylinder.

When fitting an Oval Profile cylinder, the two plastic inserts in the cylinder hole should first be levered out with a screwdriver or similar tool, then proceed to fit new cylinders as above.

CHANGING HAND

- 1) Remove the faceplate from the lock.
- 2) Rotate the latchbolt to the desired handing.
- 3) Replace the faceplate, and test the operation of the lock. Locks with brass finish: remove temporary M4 screw from faceplate and fit brass M4 screw.

USAGE

We offer three grades of lock within the Kaye Kompact range:

Kaye Kompact 1000 - privacy locks for internal doors.

Kaye Kompact 2000 - security locks for general use.

Kaye Kompact 3000 - high security locks for perimeter doors.

Each lock range offers the same high level of durability, strength and weather resistance and is suitable for high traffic applications.



Each lock range requires the same door preparation and uses the same cylinders and door furniture (Note however that the Kaye Kompact 3000 range comes with a security box striking plate).

To ensure that the bolt fully throws when the door is closed, mortice out locally behind the slot in the striking plate, to a minimum depth of 15mm.

Euro Profile Oval Profile



22mm Swiss Profile

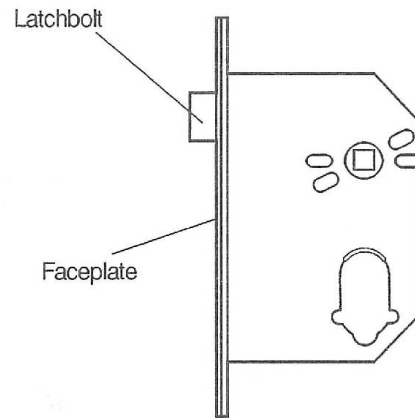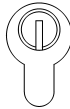

TEMPLATE

